


⚠ WARNING

These units should be operated only by authorized adults who have read and understand these operating instructions. Movement and/or operation of these tables by children could result in serious injury! It is dangerous to leave children unattended in the area of folded tables. Do not use tables as room dividers. To avoid table tipping over, push from end of table; DO NOT push from flat table side. If necessary to replace or repair leg assembly, contact Palmer Hamilton. Center legs contain springs under compression that may be hazardous and could result in serious injury if released without following proper procedures. Do not sit or stand on tabletops.

MOVING THE TABLE

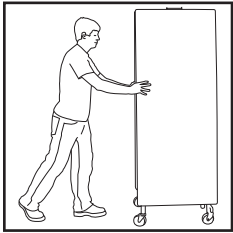

CORRECT WAY
To avoid table tipping over, push from the end of the folded table, facing the Center Lock Rod.



INCORRECT WAY
Pushing from the flat table side may cause tipping.


MAINTENANCE TIPS

1. Lubricate up and down latches on a regular basis.
2. Check nuts and bolts on a regular basis.
3. Lubricate all pivot points as required.
4. Use mild soap and water, damp sponge for general cleaning. For tougher stains, visit wilsonart.com.
5. **DO NOT** power wash!


TO OPEN THE TABLE FOR IN-USE POSITION




STEP 1
Locate storage latch and unhook to release table from storage position.

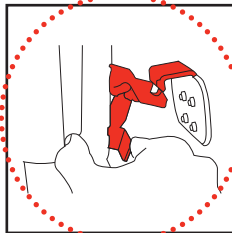

Close-up of storage latch.

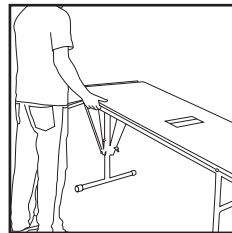


STEP 2
Push out and gently lower table down into the tee-pee position. Position table as desired.

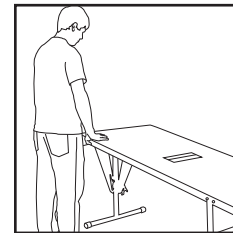


STEP 3
Gently push down until latched. Lift up on table center to verify the table is in the locked position.


TO CLOSE THE TABLE FOR STORAGE POSITION

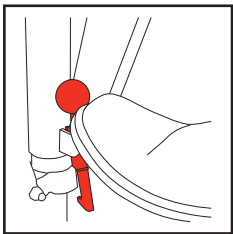

STEP 1
Slightly push down on the middle of tabletop. With your foot, release the down latch and hold open while raising table in center.

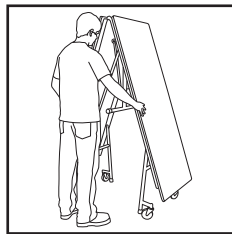

STEP 2
Remove your foot from down latch. Grasp the edges of table and pull upward in one continuous motion toward center.

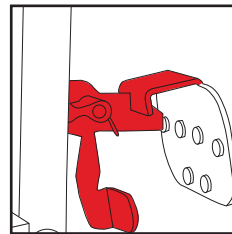

STEP 3
Make sure storage latch is engaged.



Customer Service 800-788-1028

As part of Palmer Hamilton's on-going commitment to quality, product specifications, changes, or modifications may be made without prior notice. **Warranty:** PALMER HAMILTON warrants that its products shall be free from defects in original material and workmanship for a period of fifteen years from the original shipment date. This warranty shall not apply to normal wear and tear or in the event products are damaged as a result of misuse, abuse, vandalism, neglect, accident, improper application, and modification or repair by persons not authorized by PALMER HAMILTON. The company will, at its discretion, repair or replace any defects. Any repair or replacement must be approved in advance by the factory before any action is taken. There are no implied warranties of fitness or merchantability, and there are no other express warranties beyond the warranties expressed here. 10/2010