


Stool Seat

INSTALLATION INSTRUCTIONS


⚠ WARNING

It is important to install all screws straight into the plastic seat and to not over tighten. It is only necessary to “snug” the screw to the stool plate. If using a cordless drill, set to the lowest setting that ratchets when the screw touches the stool plate. If the screw is stripped during installation, replace the stool seat or place a small amount of epoxy glue in the screw hole and reinstall the screw. Proper installation of the stool seats will ensure many years of trouble-free service.


INSTALLING THE STOOLS ONTO THE STOOL PLATES

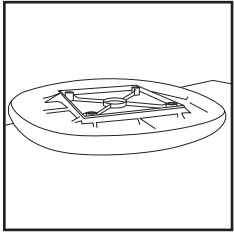


STEP 1
Remove stools and attachment screws from the shipping box. Invert stool seats on a flat work surface.

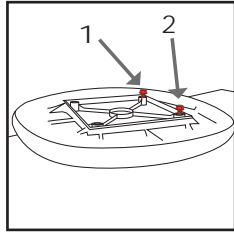


STEP 2A
Align two screws, one in each adjoining corner, into the stool screw holes.

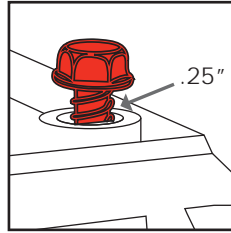


STEP 2B
Install the two screws. Do not screw the screws in all the way - leave a .25 inch gap between screw head and stool.

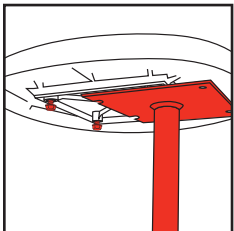

STEP 3
Flip stool so seat side is up and place over stool plate. Align partially installed screws with slotted holes on the stool plate.

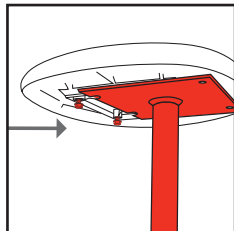

STEP 4
Slide into place, so stool holes align with stool plate holes.

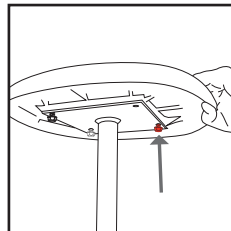

STEP 5
Install screw #3 into an aligned stool and stool plate hole. Do not over tighten. (See warning.)

Tighten down the first two screws installed on the slotted hole side, then proceed to install screw #4 into the last aligned stool and stool plate hole.

MAINTENANCE TIPS

1. Clean with approved cleaning agent. Use mild soap and water, damp sponge for general cleaning.
2. Do not use cleaners containing pine oils, methyl and ethyl alcohol or hydrocarbons, as these will cause deterioration of stools.
3. **DO NOT** power wash!

IMPORTANT MESSAGE

If using a cordless drill, set to the lowest setting. Please read warning for details.



Customer Service 800-788-1028

As part of Palmer Hamilton's on-going commitment to quality, product specifications, changes, or modifications may be made without prior notice. **Warranty:** PALMER HAMILTON warrants that its products shall be free from defects in original material and workmanship for a period of fifteen years from the original shipment date. This warranty shall not apply to normal wear and tear or in the event products are damaged as a result of misuse, abuse, vandalism, neglect, accident, improper application, and modification or repair by persons not authorized by PALMER HAMILTON. The company will, at its discretion, repair or replace any defects. Any repair or replacement must be approved in advance by the factory before any action is taken. There are no implied warranties of fitness or merchantability, and there are no other express warranties beyond the warranties expressed here. 11/2011